

# Accuride®

75% Extension, low profile height of 20 mm

Note: Not suitable for flat mounting.

## APPLICATIONS:

75% extension is ideal for compact yet functional applications, such as medical dispensing systems, vending machines, cash handling systems, and retail displays.


## MODEL 2421 QUICK REFERENCE

Side Space: 0.31" [8 mm]

Length: 8" - 22"

Height: 0.79" [20 mm]

Load: 35 lbs.

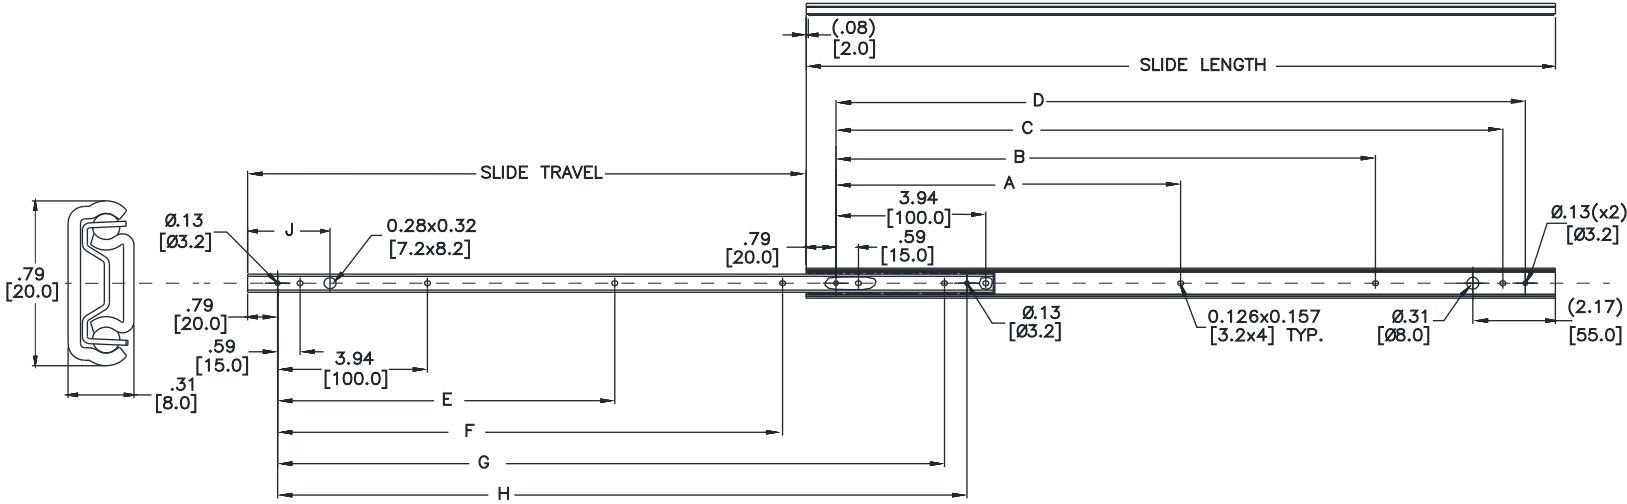

<b>Finish</b>	Electro-zinc plating (C)	<b>Side Space</b>	0.31 +0.030/0.00" [8 mm +0.76/-0.00]
<b>Lengths</b>	Even lengths 8" - 22" [200 mm to 550 mm]	<b>Mounting</b>	Side mount only
<b>Travel</b>	See chart	<b>Drawer width</b>	18" [450 mm]
<b>Height</b>	0.79" [20 mm]	<b>Hardware</b>	M3 Screws
<b>Load Rating</b>	35 lbs. [15 kg]*	<b>Ball Bearing</b>	Steel
		<b>Features</b>	75% Extension

PART NUMBER	SLIDE LENGTH	SLIDE TRAVEL	A	B	C	D	E	F	G	H	J
C 2421-8	7.87[200]	5.20[132]	—	—	5.71[145]	6.30[160]	—	—	5.71[145]	6.30[160]	(2.17)[55]
C 2421-10	9.84[250]	7.17[182]	—	—	7.68[195]	8.27[210]	—	5.91[150]	7.68[195]	8.27[210]	(2.17)[55]
C 2421-12	11.81[300]	8.62[219]	—	6.30[160]	9.65[245]	10.24[260]	—	7.48[190]	9.65[245]	10.24[260]	(2.17)[55]
C 2421-14	13.78[350]	10.08[256]	—	8.27[210]	11.61[295]	12.21[310]	—	8.86[225]	11.61[295]	12.21[310]	(2.17)[55]
C 2421-16	15.75[400]	11.57[294]	—	10.24[260]	13.58[345]	14.17[360]	—	10.43[265]	13.58[345]	14.17[360]	(2.17)[55]
C 2421-18	17.72[450]	13.03[331]	8.07[205]	12.21[310]	15.55[395]	16.14[410]	7.48[190]	11.81[300]	15.55[395]	16.14[410]	(5.51)[140]
C 2421-20	19.69[500]	15.00[381]	9.06[230]	14.17[360]	17.52[445]	18.11[460]	8.86[225]	13.27[337]	17.52[445]	18.11[460]	(5.51)[140]
C 2421-22	21.65[550]	16.46[418]	10.04[255]	16.14[410]	19.49[495]	20.08[510]	10.43[265]	14.84[377]	19.49[495]	20.08[510]	(5.51)[140]

## Notes:

- \*Load rating based on an 18" slide on a 18" wide drawer cycled 80,000 times.
- Recommended fixing: M3 screws.




## Install Drawer Member

1. Screw the last hole of the drawer to the drawer member, keeping the drawer angled downward to proceed with the next step.
2. Extend the slide to screw the first and last holes of the cabinet member to the cabinet using the available access points, while keeping the drawer angled downward.

## Install Cabinet Member

3. Keep the slide extended and level the drawer with it. Then, screw the front hole of the slide and the middle hole of the slide.
4. Step 4: With the slide still extended, screw the middle hole of the OM to the cabinet.

Note: You must install both slides at the same time to ensure the best alignment and fit.

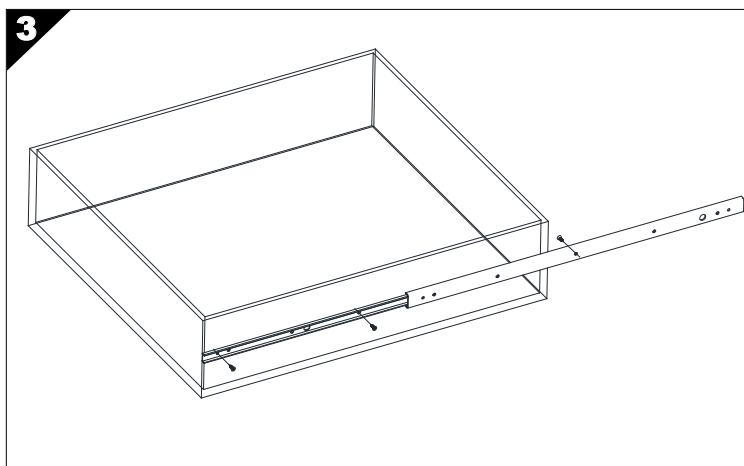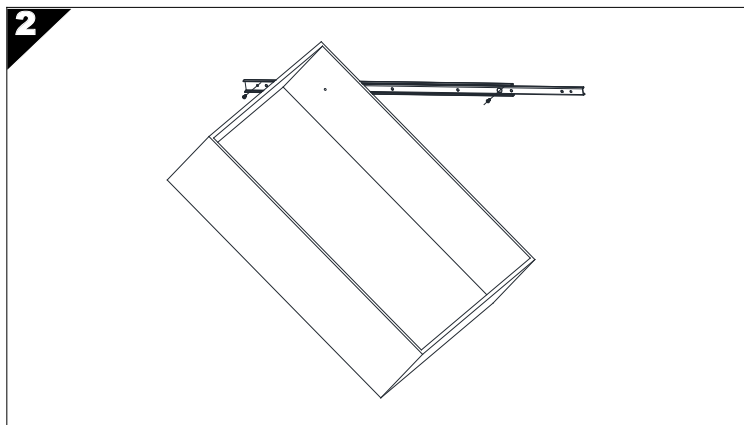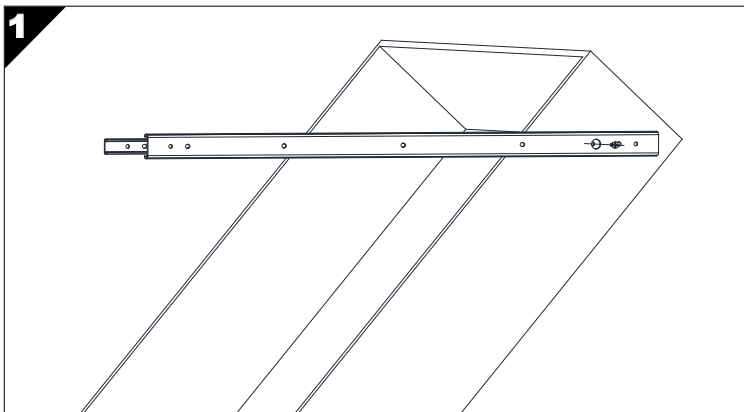

## Slide Ordering Instructions

Complete your slide order for model 2421 by specifying the following:

	200	Each	C	2421	-8	D
Total Required Slides						
Slide Finish						
Slide Model						
Slide Length						
Polybag Packaging						

For the most current technical information visit [www.accuride.com](http://www.accuride.com)

## Packaging

Distributor (D) Pack: All lengths are packaged 10 pairs per box. Each polybag contains one pair of slides, an installation sheet, and M3 wood screws for the cabinet member.

Bulk (P) Pack: All lengths are packaged 20 pairs per box. Installation screws are not included.

## Specifications

Slide members: Cold rolled steel  
 Ball retainers: Cold rolled steel  
 Ball bearings: Carburized steel  
 RoHs Compliant

Note: Specification, materials, prices, terms and delivery are subject to change without notice.

# Accuride

ACCURIDE INTERNATIONAL INC.

12311 Shoemaker Avenue  
 Santa Fe Springs, CA 90670

TEL (888) 491-7112

FAX (562) 903-0208

[www.accuride.com](http://www.accuride.com)

Manufacturing, Engineering, and Sales

United States • Germany • Japan • Mexico • United Kingdom • China

Copyright © 2017-2025 Accuride International Inc. 3700-9616-MK216-R2-0425